
NIDAC SECURITY PTY. LTD.

2 CROMWELL STREET
BURWOOD VICTORIA 3125
AUSTRALIA



TELEPHONE +61 (3) 9808 6244
FACSIMILE +61 (3) 9808 9335
WEB SITE <http://www.nidac.com>

To reset the PACDL

1. Remove power from PACDL.
2. Hold down "Del" & "0" keys.
3. Reapply power whilst holding down keys.
4. When the PACDL asks for an operator code release keys and enter a valid operator code for the PACDL or use "1234567" then "E".
5. Press the "9" key when asked for confirmation.

Now to reload the settings and users from the software do the following.

6. If the operator code used to log into the software is still "1234" skip to step 11.
7. Log into the software using a valid operator with level 1 access.
8. Go to File->Edit Operators.
9. Either edit the current operator's code and make it "1234" or create a new operator with level 1 access with that code.
10. Log back out of the software.
11. Log into the software using the operator with the code "1234".
12. Go to Settings->Send to Logger then answer Yes to any questions.
13. Go to Settings->Options->Transfer Time/Date to PACDL then answer Yes to any questions.
14. Go to Users->Send to Logger then answer Yes to any questions.
15. If the operator was changed at the start go back and set it all back to the way it was.